

200/EV5 Dump Bed Kit Installation Instructions


Parts list

- Pin Axle*2
- B Pin 3×60 *2
- Damper*2
- B Pin 1.8×30 *4



Step 1

Lift the cargo box onto the frame, aligning the holes on the cargo box mounting plate with those on the frame. Then use the installation pins① to secure the cargo box mounting plate to the frame, and finally secure it with 3x60 B-type pins②. Repeat the same steps on both sides.

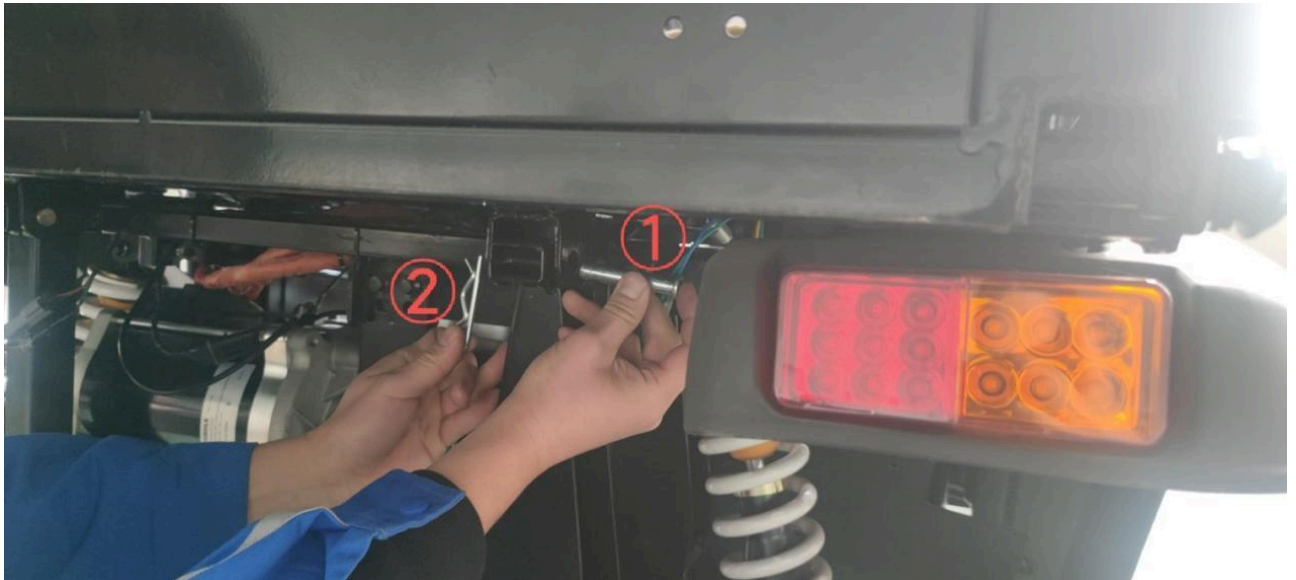

Step 2

Lift the cargo box to the appropriate position so that the front and rear ends of the gas spring are aligned with the installation shafts of the box and the frame. Then gently push it in, ensuring that the ball head is fully inserted into the installation shaft. Secure both ends with 1.8x30 B-type pins. Repeat the same steps on both sides.



Step 3

Place the cargo box flat. Connect the tail light cable's power line interface ① to the main cable socket ③, and the power line interface ② to the main cable socket ④. Ensure that the power plug is fully inserted and there is no looseness. Repeat the same steps on both sides.

